 
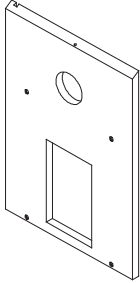 
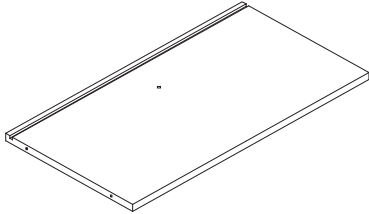 
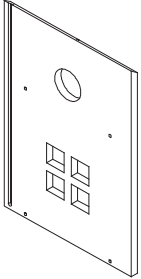 
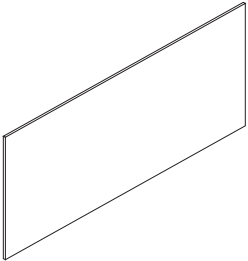 
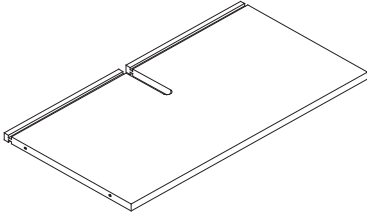 
 
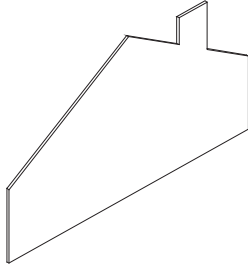 
 
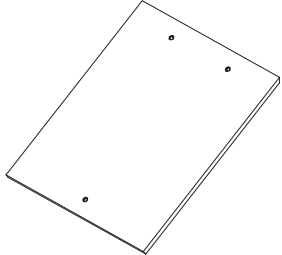 
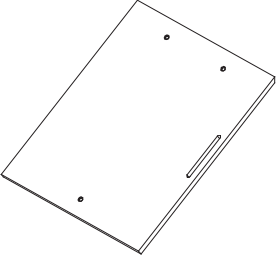 
 
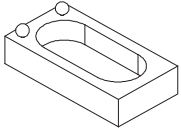 
 
 
 
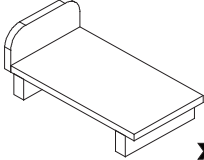 
 
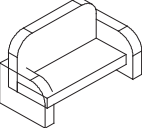 
 


 
 
 
 
 
 
 


ASSEMBLY INSTRUCTION MT7601

A	B	C	D	E		
						
x1	x1	x1	x1	x1		
F	G	H	I	J		
						
x1	x1	x1	x1	x1		
P1	P2	P3	P4	P5	P6	P7
						
x1	x1	x1	x1	x1	x1	x1
P8	P9	P10	P11	P12	24	25
						
x1	x1	x1	x1	x1	24mm x10	16mm x6

ADULT ASSEMBLY REQUIRED. This package contains small parts which are for adult assembly only. Please make sure all screws and bolts are securely fastened during assembly. Upon completion please double check before using the toy. Failure to follow assembly instruction will cause damages to the toy and potentially result in an injury to children.

ASSEMBLY INSTRUCTION MT7601

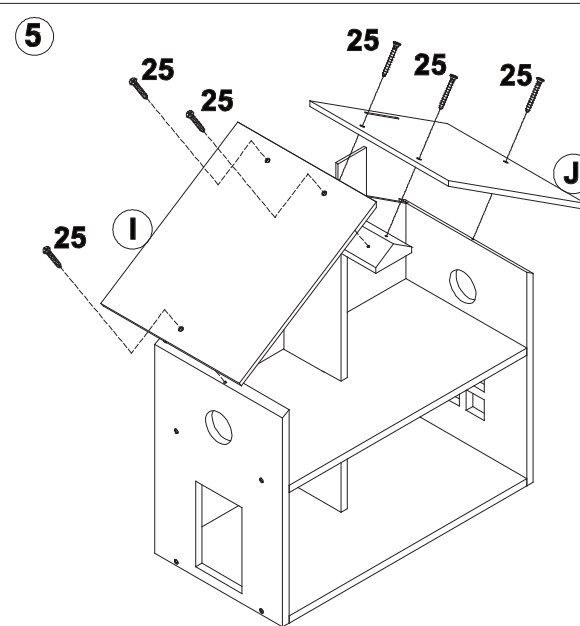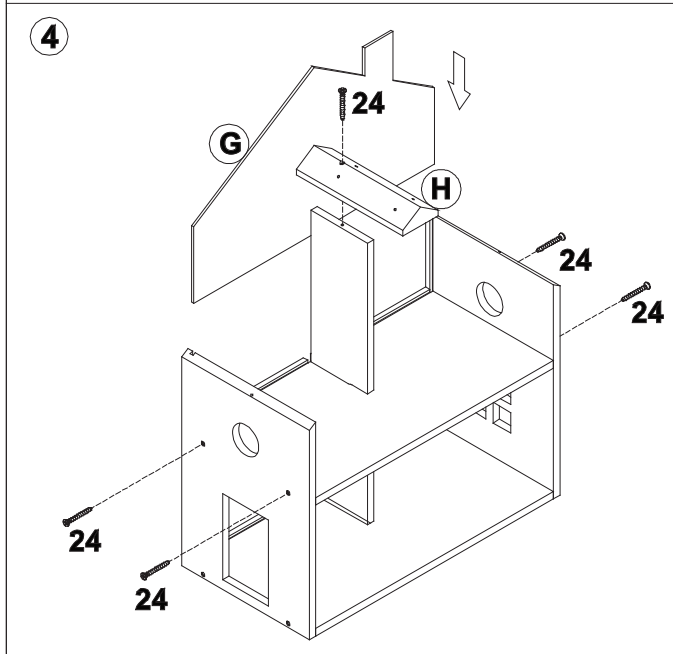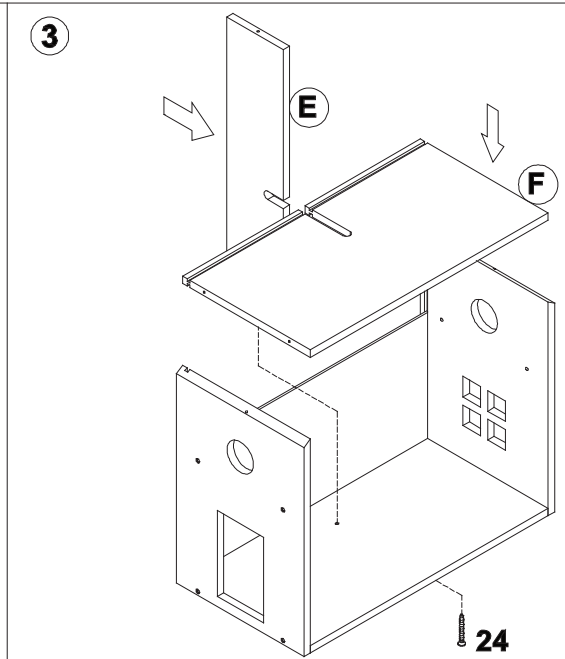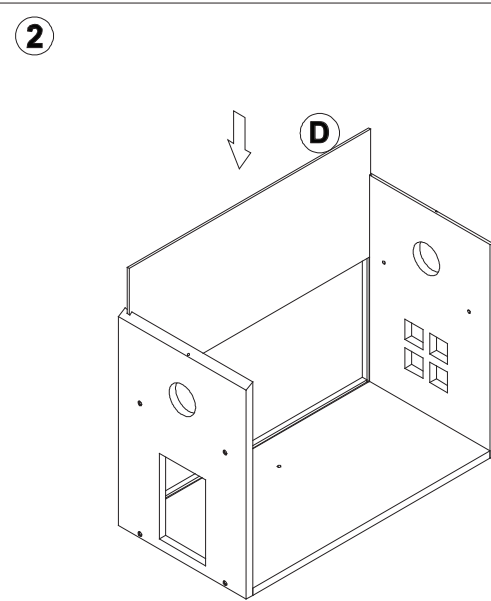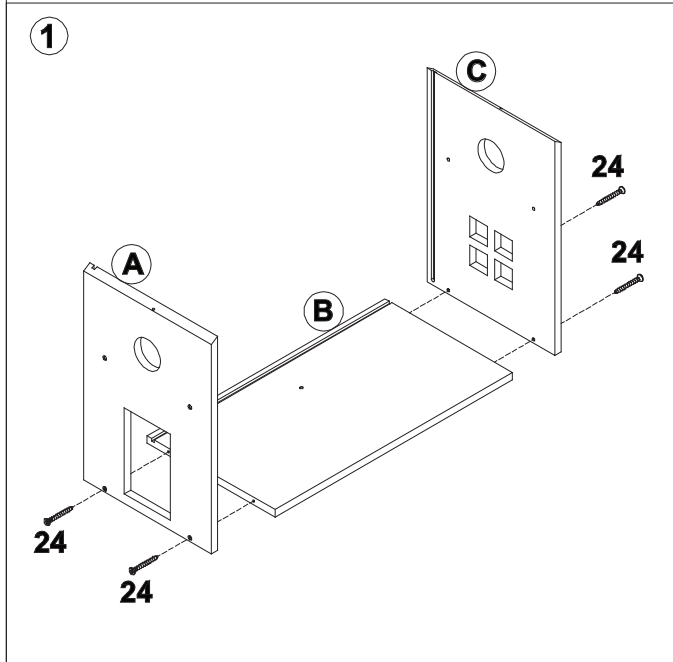

COMPLETE

