
 


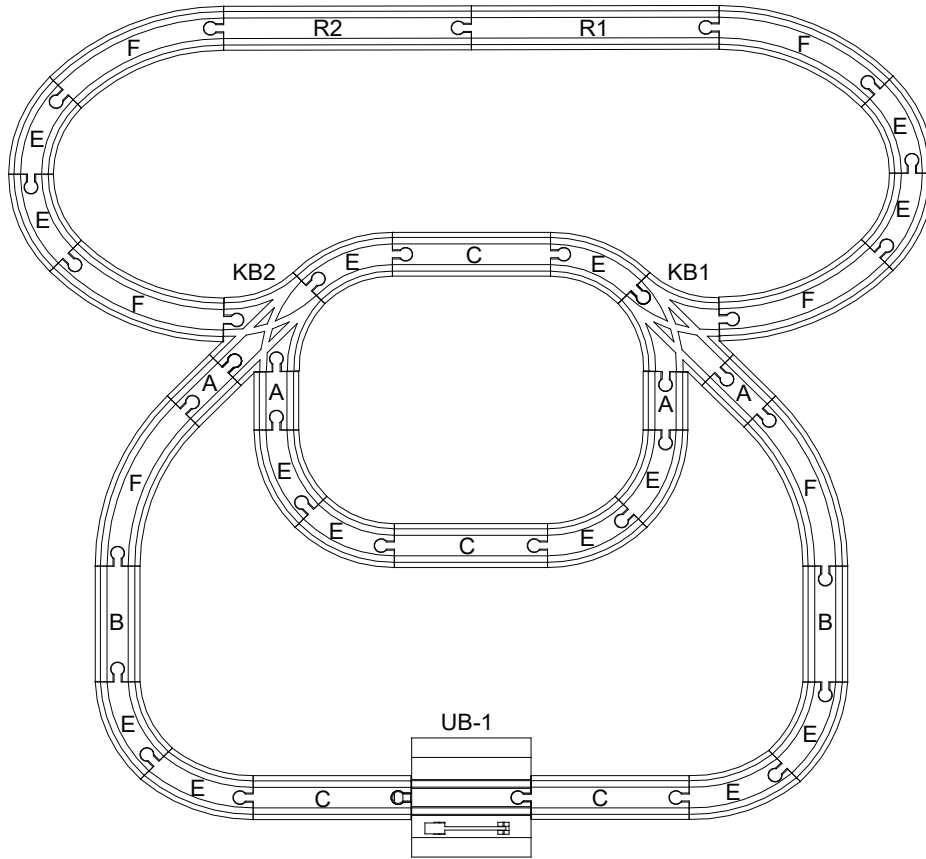

 

 



 

 
 



 

 
 
 


 




# ASSEMBLY INSTRUCTIONS

## MT7702



A	B	C	E	F	UB-1	KB1	KB2
							
x 4	x 2	x 4	x 14	x 6	x 1	x 1	x 1
R1			R2			Y702A	Y702B
							
x 1			x 1			x 1 x 1 = 2	x 1 x 1 = 2
Y702C	Y702D	Y702E	Y702F	Y702G	Y702H	Y702I	Y702K
							
x 3	x 2 x 2 = 4	x 2 x 2 = 4	x 1	x 1	x 1	x 1	x 2
Y702L	Y702M	Y702N	Y702O	Y702P	Y702Q	Y702R	Y702S
							
x 2	x 1	x 1	x 1	x 1	x 1	x 1	x 1

**ADULT ASSEMBLY REQUIRED.** This package contains small parts which are for adult assembly only. Please make sure all screws and bolts are securely fastened during assembly. Upon completion please double check before using the toy. Failure to follow assembly instruction will cause damages to the toy and potentially result in an injury to children.