 
 
 
 

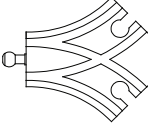 
 
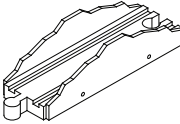 
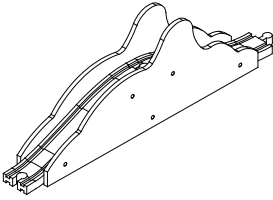 
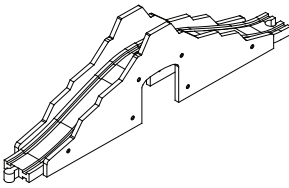 
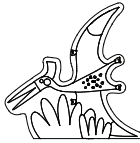 



 

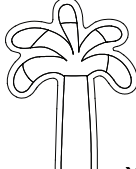 
 

 




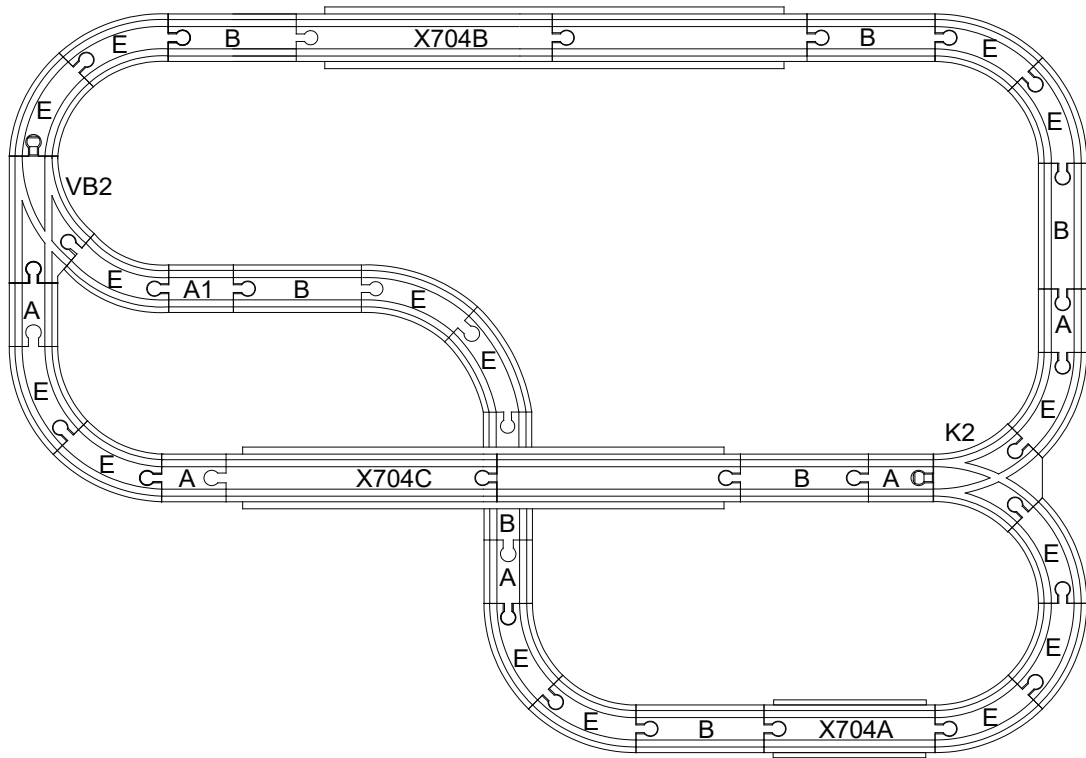




ASSEMBLY INSTRUCTIONS

MT7704



A	A1	B	E	K2	VB2	X704A
						
x 5	x 1	x 7	x 15	x 1	x 1	x 1
X704B		X704C		Y704A	Y704B	Y704C
						
x 1		x 1		x 1	x 1	x 1
Y704D	Y704E	Y704F	Y704G	Y704H	Y704I	Y704J
						
x 1	x 1	x 1	x 1	x 1	x 1	x 1
Y704K	Y704L	Y704N	Y704O	Y704P	Y704Q	Y704R
						
x 1	x 1	x 1	x 1	x 1 x 1 = 2	x 1 x 1 = 2	x 1 x 1 = 2

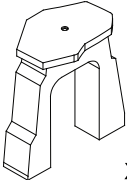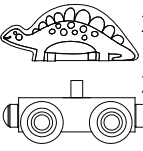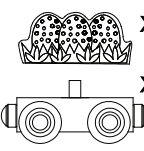     ADULT ASSEMBLY REQUIRED. This package contains small parts which are for adult assembly only. Please make sure all screws and bolts are securely fastened during assembly. Upon completion please double check before using the toy. Failure to follow assembly instruction will cause damages to the toy and potentially result in an injury to children.

ASSEMBLY INSTRUCTIONS

X704B

 
HARDWARE




14 MM

10 x

1

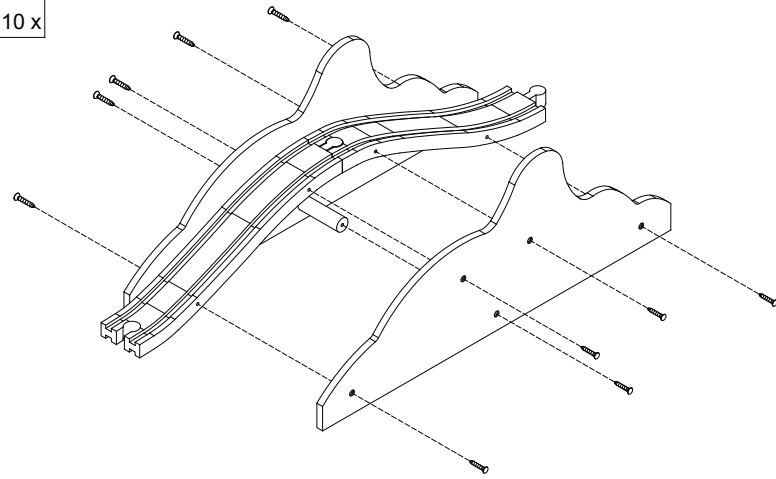

Complete

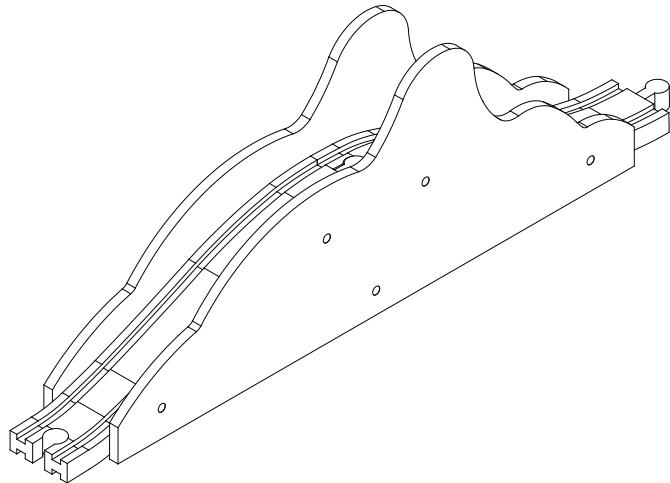 

ASSEMBLY INSTRUCTIONS

X704C

 
HARDWARE




14 MM

12 x

1

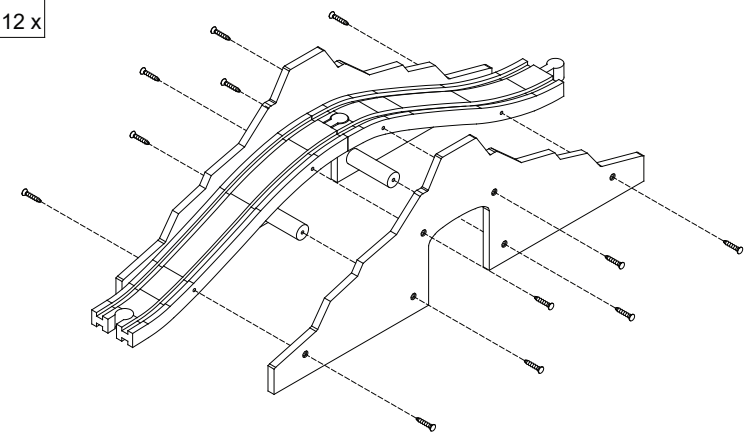


Complete

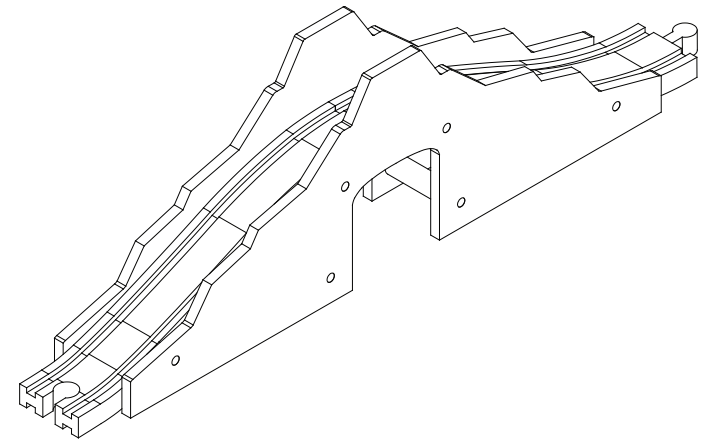 

ASSEMBLY INSTRUCTIONS
Y704N

 ①

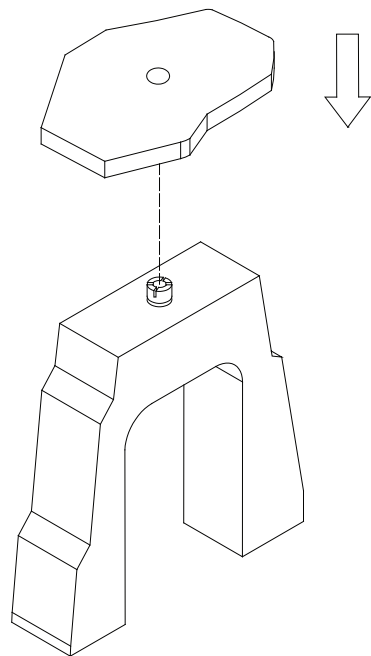

Complete

