 
 
 
 
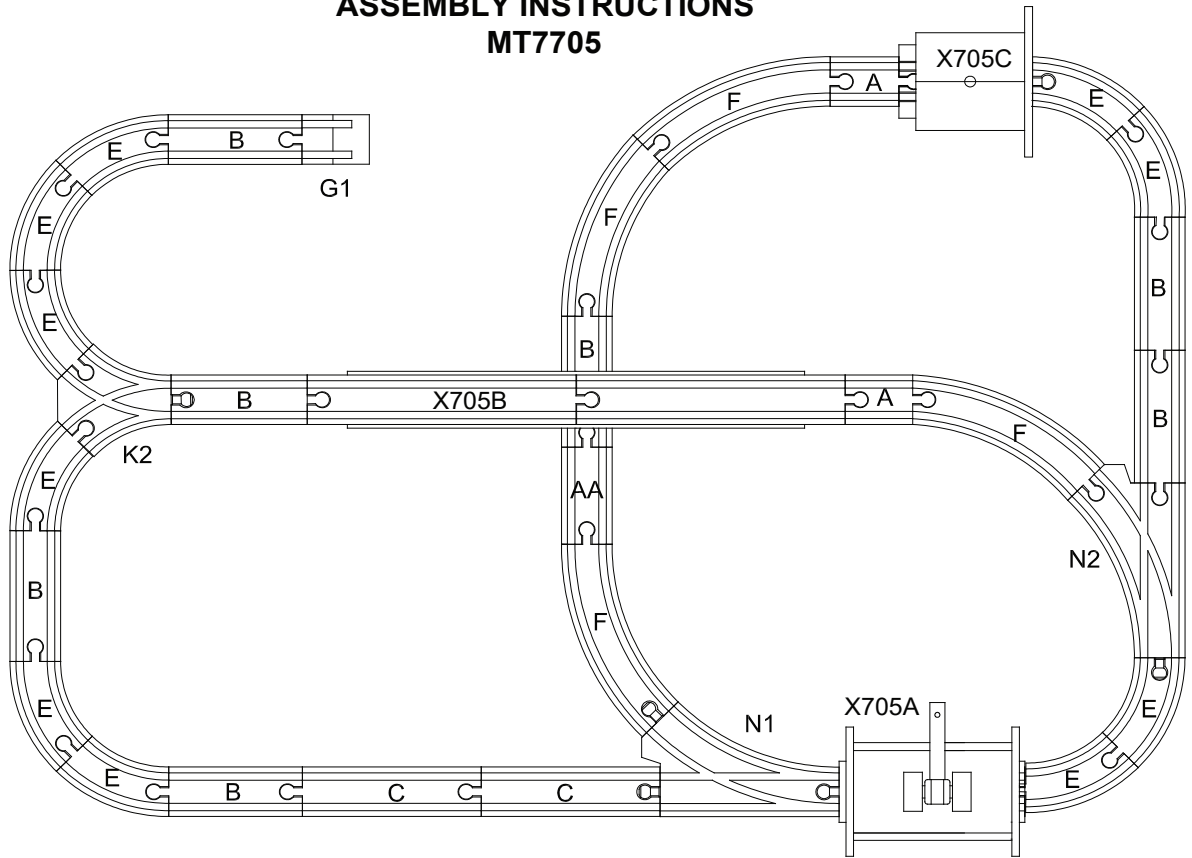 


 
 
 
 
 
 









 


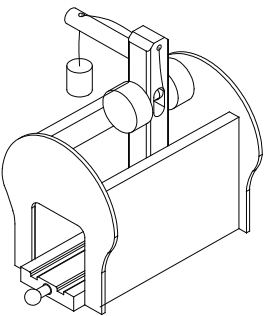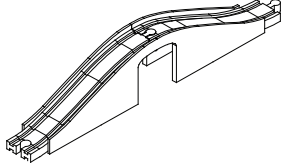


ASSEMBLY INSTRUCTIONS

MT7705




A	AA	B	C	E	F	G1
						
x 2	x 1	x 7	x 2	x 10	x 4	x 1
X705A		K2	N1	N2	X705B	
						
		x 1	x 1	x 1	x 1	
Y705D		Y705E	Y705F	Y705H	Y705I	Y705J
						
x 1		x 1	x 1	x 1	x 1	x 1
Y705M	Y705N	Y705O	Y705P	Y705Q	Y705R	Y705S
						
x 1	x 1	x 1	x 1	x 1 x 1 = 2	x 1 x 1 = 2	x 1

 
ADULT ASSEMBLY REQUIRED. This package contains small parts which are for adult assembly only. Please make sure all screws and bolts are securely fastened during assembly. Upon completion please double check before using the toy. Failure to follow assembly instruction will cause damages to the toy and potentially result in an injury to children.

ASSEMBLY INSTRUCTIONS
X705A


HARDWARE


19 MM
12 x

 
①

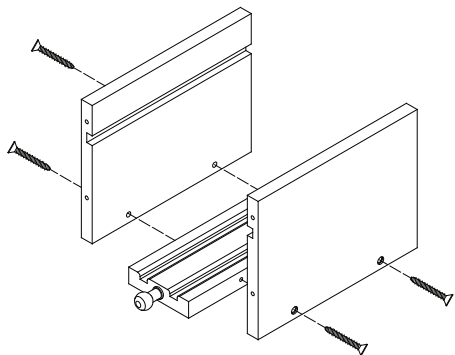


②

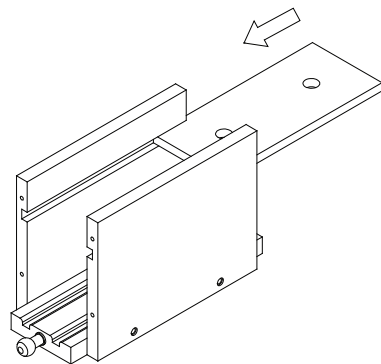 

③

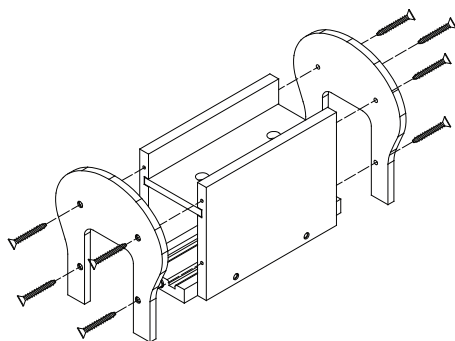 


④

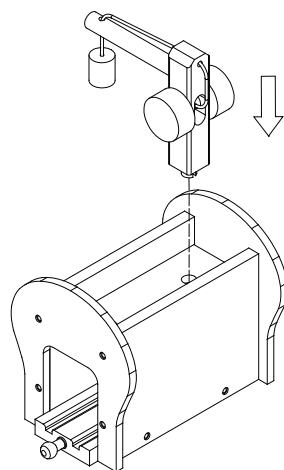 


ASSEMBLY INSTRUCTIONS
X705C


HARDWARE


24 MM
7 x

 
①

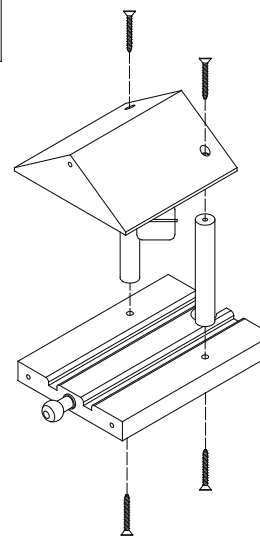

②

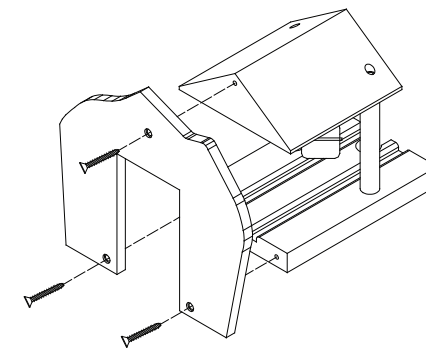 

Complete

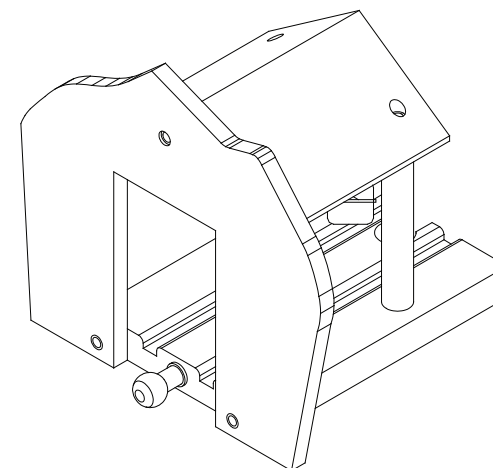 

ASSEMBLY INSTRUCTIONS

X705B

 
HARDWARE



14 MM

12 x

1

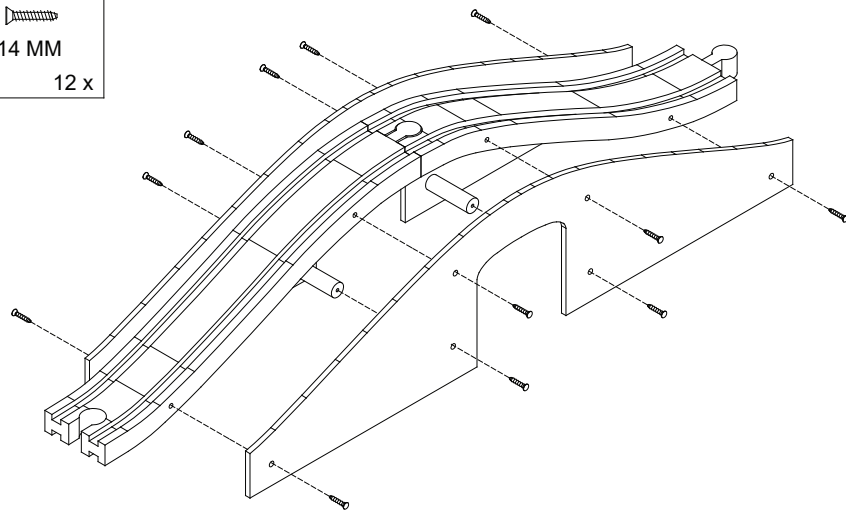

Complete

